

easy
mobile
GO EASY, GO MOBILE.



MAX BOX
WIRELESS SPEAKER

USER MANUAL

The Chapter I: Caution



- Please study this manual carefully before using this speaker.
- Please use and keep the speaker in normal temperature condition.
- Keep the speaker away from high temperature. Direct sunlight, fire or other similar environment is not allowed.
- To avoid destroying, do not throw or drop it
- Please use the right adapter to recharge it.
- If the USB cable, or aux cable can not match your devices, please contact local retailers.
- In order to protect your ear, please adjust the volume to a suitable level.
- Waterproof design, can be used in splash. Please wipe up when water splashes. Submersion is not allowed.
- Don't disassemble the speaker by yourself when the speaker can't work for any reason. Please contact professional maintenance personnel.
- The speaker is made up of recyclable high performance materials and components. Don't dispose it with daily rubbish. Please understand local rules about the classified collection of electrical, electronic equipment and battery. How you discard the speaker correctly will make contribute to environment protection, human health and saving natural resources.

The Chapter II: Features

Hi-Fi Sound

BAS™ technology creates stereo and Hi-Fi sound, conquering your picky ears completely.

Extra loud

4W*2 speaker makes bigger volume and more powerful.

2500mAh battery

The speaker can run for more than 10 hours continuously with medium volume, no need frequent charging, and enjoy non-stop music.


i-Free Controller

It's a patented technology. Easier and more convenient operation let you enjoy happy time freely.

Stable FM Radio

Build-in integrated amplifier, quicker searching, more stations, clearer and smoother signal.


The Chapter III: Accessories

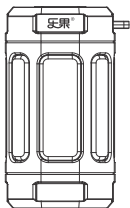

Speaker: 1 pc



Remote controller: 1 pc

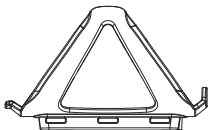

Bike Mount: 1 pc



Hook: 1 pc



Allen wrench: 1 pc



 
User Manual: 1 pc



AUX cable: 1 pc




USB cable: 1 pc



Bundle tie: 4 pc

The Chapter IV: Buttons Function

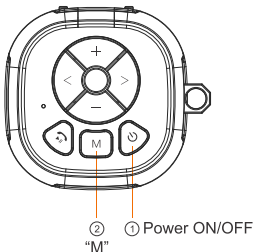

① Power ON/OFF:

- hold on for 2 seconds to turn on/off, click is no function.
- When turn on ,the speaker will remember and play the mode you used last time.
- Hold on for 10 seconds to reset.


② M: Mode switch/Voice guide ON OFF

- Hold on to open/close the voice guide.
- Click to change mode among Bluetooth mode /TF card mode/FM mode/AUX mode.

* Remark:

TF card or AUX cable should be inserted into the speaker before change the TF card mode or AUX mode, otherwise it will skip to next mode.

The Chapter IV: Buttons Function

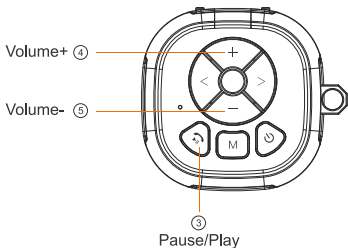


③ PAUSE/PLAY

- In Bluetooth mode: click to pause/play music, hold on to disconnect the Bluetooth.
- In TF card mode: click to pause/play music, hold on to switch folder in TF card.
- In FM mode: click to mute/Play; hold on to search radio stations automatically.
- In AUX mode: click to mute/Play, hold on invalidly.
- When phone rings, click to answer the phone, hold on to refuse.
- when answering the phone, click to hang up, hold on to switch to answer by mobile phone.

④ **Volume +**: Press to increase the volume

⑤ **Volume -**: Press to decrease the volume

The Chapter IV: Buttons Function

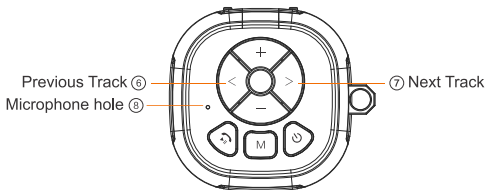

⑥ Previous Track:


- In Bluetooth mode: click to play last music, holding on is invalid
- In TF card mode: click to play last song, hold on to fast reverse
- In FM mode: click to play the last station, hold on to search station backwards
- In AUX mode: this button is invalid

⑦ Next Track:

- In Bluetooth mode: click to play next track, holding on is invalid
- In TF card mode: click to play next track, hold on to fast-forward.
- In FM mode: click to play next station, hold on to search the next station forward.
- In AUX mode: this button is invalid

⑧ Microphone hole

The Chapter V: Remote Controller function

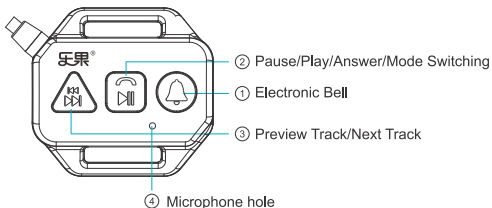

① **Electronic Bell:**

Press to ring the bell, double press to switch to another bell style. Bell ring is prior whatever mode it is.

② **Pause/Play/Answer/Mode Switching**


- In Bluetooth/TF card mode: click to pause/play.
- In TF card mode: hold on to switch folders in TF card.
- In FM mode: click to mute/play, hold on to search radio stations automatically.
- In any mode: quickly double press to switch mode
- Answer calls: click to answer coming call in any mode, hold on to reject the call.

When answering the call, click to hang up.

③ **Preview Track/Next Track:** click to next song/radio station, hold on to previous/next song/radio station.

④ **Microphone hole**

The Chapter VI: Interface Function

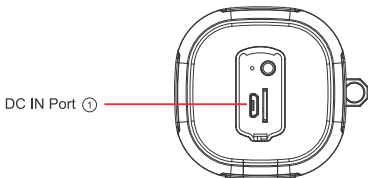


① DC IN Port:

- **Data transfer:** Turn speaker off, insert TF card into the speaker. Connect with computer via USB cable, and then you can transfer data (music files) from the computer to the TF card.
- **Recharge the battery:** connect DC5V~1000mA adapter or Android cell phone charger or computer USB port.
- **AUX:** Turn speaker on, connect speaker with the other device via AUX cable to play music in the other device.

*Intelligent power saving mode:

- Speaker will automatically turn off to save power if no any task in 10minutes.
- When low battery, “beep” sound will be heard. And the volume will be down automatically. But the speaker can continue to play. When the “beep” sound is heard again, please recharge the speaker; otherwise it will power off.

The Chapter VI: Interface Function

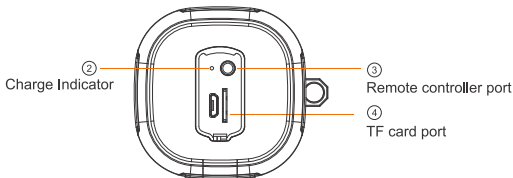

② Charge Indicator:

Red light is on when charging, green light is on when battery full.


③ Remote controller port:

Insert controller, and then you can control the speaker by controller.

④ TF card port:

Turn on the speaker, inset TF card, speaker will automatically play the TF card music (If needed, press "M" to change the mode to TF card)

The Chapter VII: Bluetooth connection

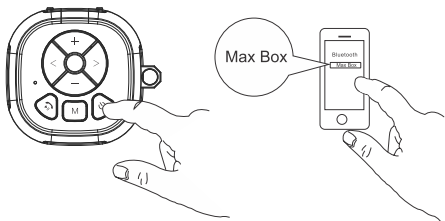

How to pair the Bluetooth speaker with tablet, smart phones or any other Bluetooth device?

- Hold on “ON/OFF” until blue light flashes, and waiting for connection
- Find “NOGO F5mini” on your Bluetooth devices and connect it.
- After connecting successfully, you will hear a voice prompt and then you can play music and get hands-free call through the speaker.
- Valid distance is up to 30m. When playing music, it may stop because of the barrier between speaker and Bluetooth devices, e.g. wall, metal shell or other devices nearby with the same frequency.

* Remark:

1. If necessary, password: 0000.
2. When restart speaker, automatically connecting with last device.
3. Press “Play/Pause” for 2 seconds to disconnect with last device until blue light flashes, and then waiting for next connection.

The Chapter VIII: Specification

Model No.: Max Box

Speaker unit: 1.5 speaker *2+ subwoofer

Power: 4Ω 4Wx2

Bluetooth version: 4.0+EDR

Play mode: Bluetooth/FM/TF card/AUX

Memory type: ≤ 32GB TF card

Music format: APE、FLAC、MP3、WMA、WAV

Battery: built-in 2500mAh lithium polymer battery


Input: DC5V,1A (Micro USB port)

Package size: 132mm x 76mm x 195mm

Speaker size: 60mm x 68mm x 111mm

Speaker N.W.:295g

Design Patent: ZL 2015 3 0075410.8

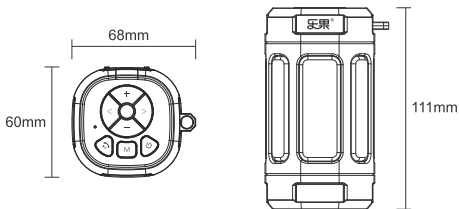

The Chapter VIII: Troubleshooting

Problems	Solutions
Music brokenly	Make sure the connecting distance $\leq 10\text{m}$ Make sure there is no barrier between two Bluetooth device Change another Bluetooth device to play the music
No sound under AUX mode	Make sure the cable is connected well Make sure computer is working well and the AUX cable is connected in right port
No sound under TF card	Make sure the TF card format is FAT32 Make sure the music file format is APE、FLAC、MP3、WMA or WAV
Button no function	Turn off the speaker and turn it on in 30 minutes Reset the speaker by pressing RESET key
No sound	Increase the volume Make sure all connecting OK Make sure the mode is matched
Noise	Make sure all connecting OK Try different connecting cable Make sure the music source without noise
Recharge failed	Make sure the USB cable is connected well Make sure the adapter can work Make sure the USB cable can work
Bluetooth pairing failed	Make sure the speaker is waiting for connecting Restart the speaker and try again

easy
mobile
GO EASY, GO MOBILE.

 easym.com.br

 [/easymobile.br](https://www.facebook.com/easymobile.br)

 [@easy.mobile](https://www.instagram.com/easy.mobile)

Product support:
Email: support@easym.com.br

