easy mobile

GO EASY, GO MOBILE.

WIRELESS CHARGING PAD
POWER MATE DUAL

USER MANUAL

Thank you for choosing a Power Mate Dual, you acquired a very high quality product.

Content of Packing:	1 wireless desktop charger 1 USB to type C cable 1 User Manual

1 - LED indicator
2 - Charging sensor
3 - Micro USB input
4 - Type-C input

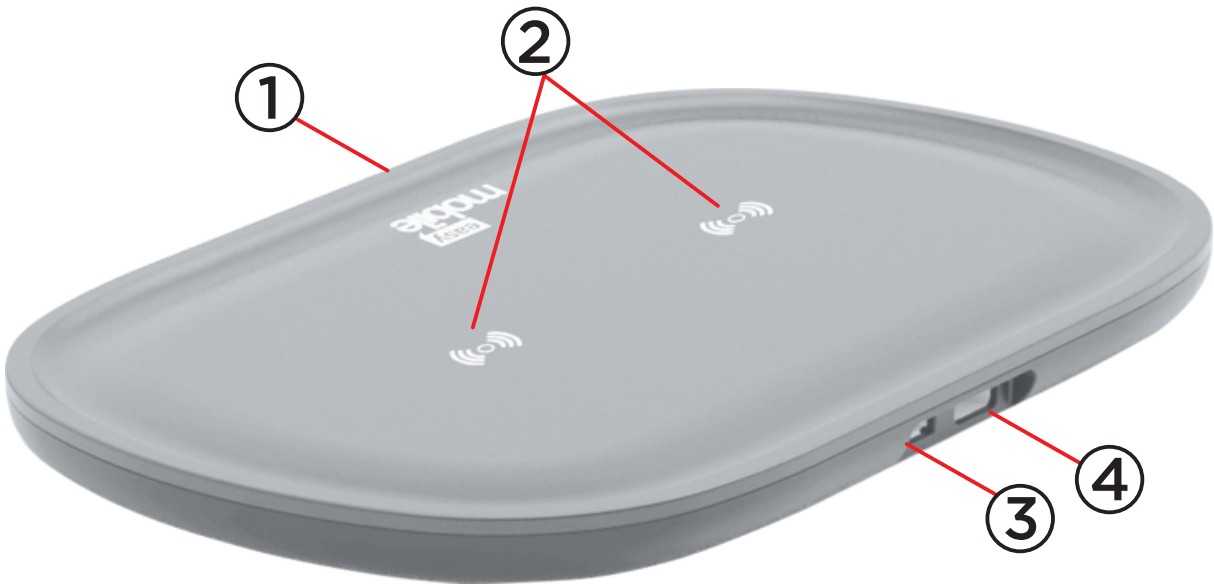

PRODUCT SPECIFICATION:	
Type-C input:	5V / 2.0A
Micro USB input:	9V / 2.0A
Wireless output:	10W / 7.5W / 5W
Charging distance:	8mm
Dimension:	160x100x11mm
Net weight:	158g

LED INDICATION

WAIT	The white and blue light flashes slowly and turns off after 10 to 15 seconds.
CHARGING	The blue light remains
COMPLETE CHARGING	The blue light remains
FOD PROTECTION	White and blue light flashes quickly until the metal is removed.

FOD PROTECTION

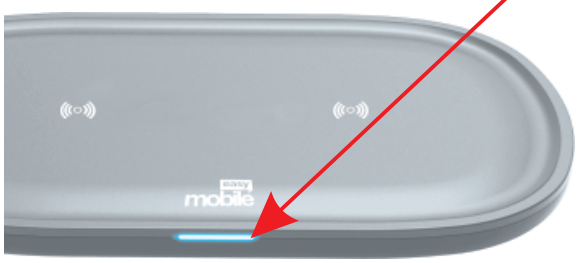

The white and blue LED will flash quickly when there is a metal object near the center of the register or a cell phone that does not support wireless charging. Please remove the metal object. If necessary, remove the protective cover from the phone for better charging.

HOW TO USE POWER MATE DUAL?

1. Connect the wireless charger and its adapter (it is recommended to using an original or better quality adapter) with Micro or Type-C sync and charge cable and light blue and white blink slowly.

2. Place the phone near the center area of the wireless charger, if the phone is in charging status, the blue indicator light.

COMPATIBILITY

These smartphones support wireless charging: iPhone 8.8 Plus, iPhone X, iPhone Xs, iPhone Xs Max, iPhone Xr, Galaxy Note 8, Galaxy S7, S7 Edge, Galaxy S6, S6 Edge, Galaxy S8, Galaxy S8 Plus, Galaxy S9, Nexus 4, Nexus 5, Nexus 6, Nokia Lumia 920,1020,928, Lumia 950, 950 XL, LG G3, G5, G6, G6 +, and others.

NOTE

a) The adapter must support Quick Charge 2.0 / 3.0 when you want to use 10W and 7.5W fast charging from the wireless charger. If the adapter supports less than 9V, the wireless charging keyboard output will have a normal 5W charge for your cell phone.

b) If charging does not occur, adjust the position of the phone so that the receiver can recognize the wireless charging area of the phone.

NOTE

Some phone cases may block wireless charging. Do not place other materials, such as metal objects, magnets and magnetic stripe cards, between the mobile device and the wireless induction area. When the mobile device is not placed on the charging surface accurately, your mobile device may not be charged properly. If you use wireless charging in an area with weak network coverage, you may lose your network connection.

SAFETY NOTICE

1 - A remodeling or modification of the product would affect the safety. Risk of injury!

2 - Please do not touch the charger with wet hands! If liquid leaks, stop immediately the power supply!

3 - Intended for internal use only. Contact with moisture must be avoided!

4 - please keep the product away from children.

5 - Please keep the product away from magnetic strips or chip cards to prevent magnetic failure.

6 - Do not open the device without authorization and do not repairs on your own!

7 - If you do not follow the safety instructions and information about proper handling in this user guide, do not we assume no responsibility for any damage resulting personnel or property damage. In addition, these cases will void the warranty.

8 - Modifications and errors reserved.

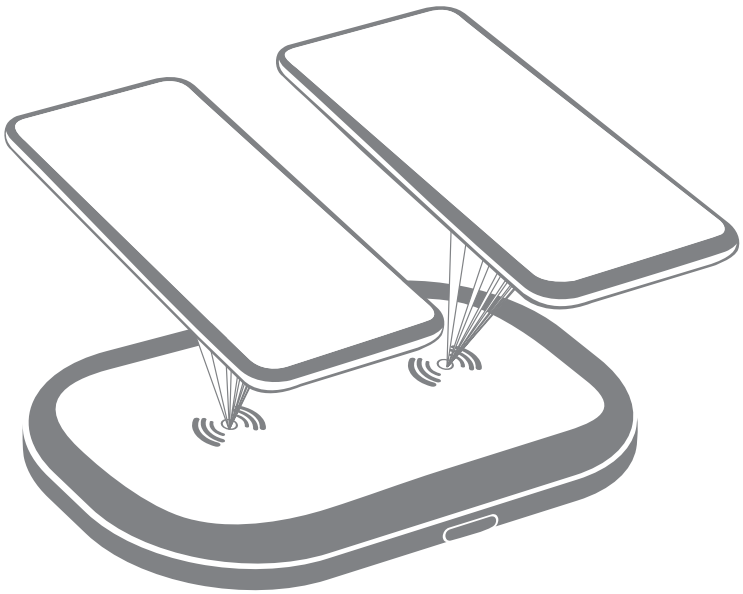

CARRIES TWO APPLIANCES SIMULTANEOUSLY

easy mobile
GO EASY, GO MOBILE.

easym.com.br
/easymobile.br
@easy.mobile

Product support:
E-mail: **support@easym.com.br**