easy mobile

GO EASY, GO MOBILE.

FLEX BOX

WIRELESS PORTABLE SPEAKER / POWER BANK

USER MANUAL

Dear customer:

Thank you for purchasing the **Flex Box** our portable 2-in-1 portable speaker, Sound / Powerbank). Please read this manual carefully before operation and store the instructions for future reference.

Flex Box

Portable Speaker / Power Bank

Package content:

1. Speaker / Power bank ..... 1 pc
2. USB Cable ..... 1 pc
3. Operating instructions ..... 1 pc
4. iPhone adapter ..... 1 pc (Optional)

Features:

The appearance of pebbles
Comfortable in Touch
Octopus Easy-grip suction cup type
Back of phone or any smooth surface
Portable Power Bank
Charge your phone at any time
Enjoy movies and music
Anywhere, any time
Your Best Cell Phone Companion

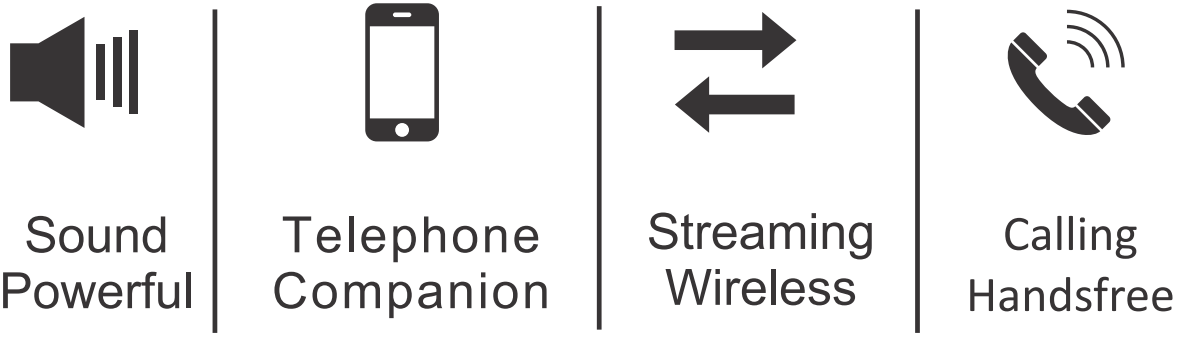

Features:

Specifications:

· Output power: 3W
· Battery: 3.7V 3000mAh
· Charging current: 800mA
· Current discharge: 5V / 1A
· Product size: 100x56x27mm
· Speaker Weight: 127g
· Music Play Time: Up to 12 hours
· Talk time: Up to 16 hours
· Standby time: up to 70 hours

Anynet ①

ON / OFF

Press and hold "ON / OFF" for 3 seconds to turn on, the blue light comes on; press e hold "ON / OFF" for 3 seconds, the blue light blinks and the unit will turn off.

Call Bluetooth

Follow the operating instructions of your Bluetooth device for pairing with the speaker. Typically this is done by going to "Bluetooth", "Settings" or menu "Connecting" and selecting the option to Bluetooth devices.

When pairing, the blue light starts flashing quickly; use cell phone or computer or other device. Search name of the "Flex Box" device, click to connect, the blue light flashes every 5 seconds when the connection successful; light blue will glow slowly when the connection out of range.

When the connection is successful; light blue will glow slowly when the connection is interval.

When you play music

Press "ON / OFF" to pause the song or press pause the music to answer a call.
The second second press short will resume music playback again;

Hands-free call operation.

1.When a call is received, the blue light remains on. Press the "ON / OFF" to answer; long press the "ON / OFF" to reject the call.
2. When in an active call, press "ON / OFF" to switch off.
3. When you are in a call, times in mute mode, another double click to continue the call.

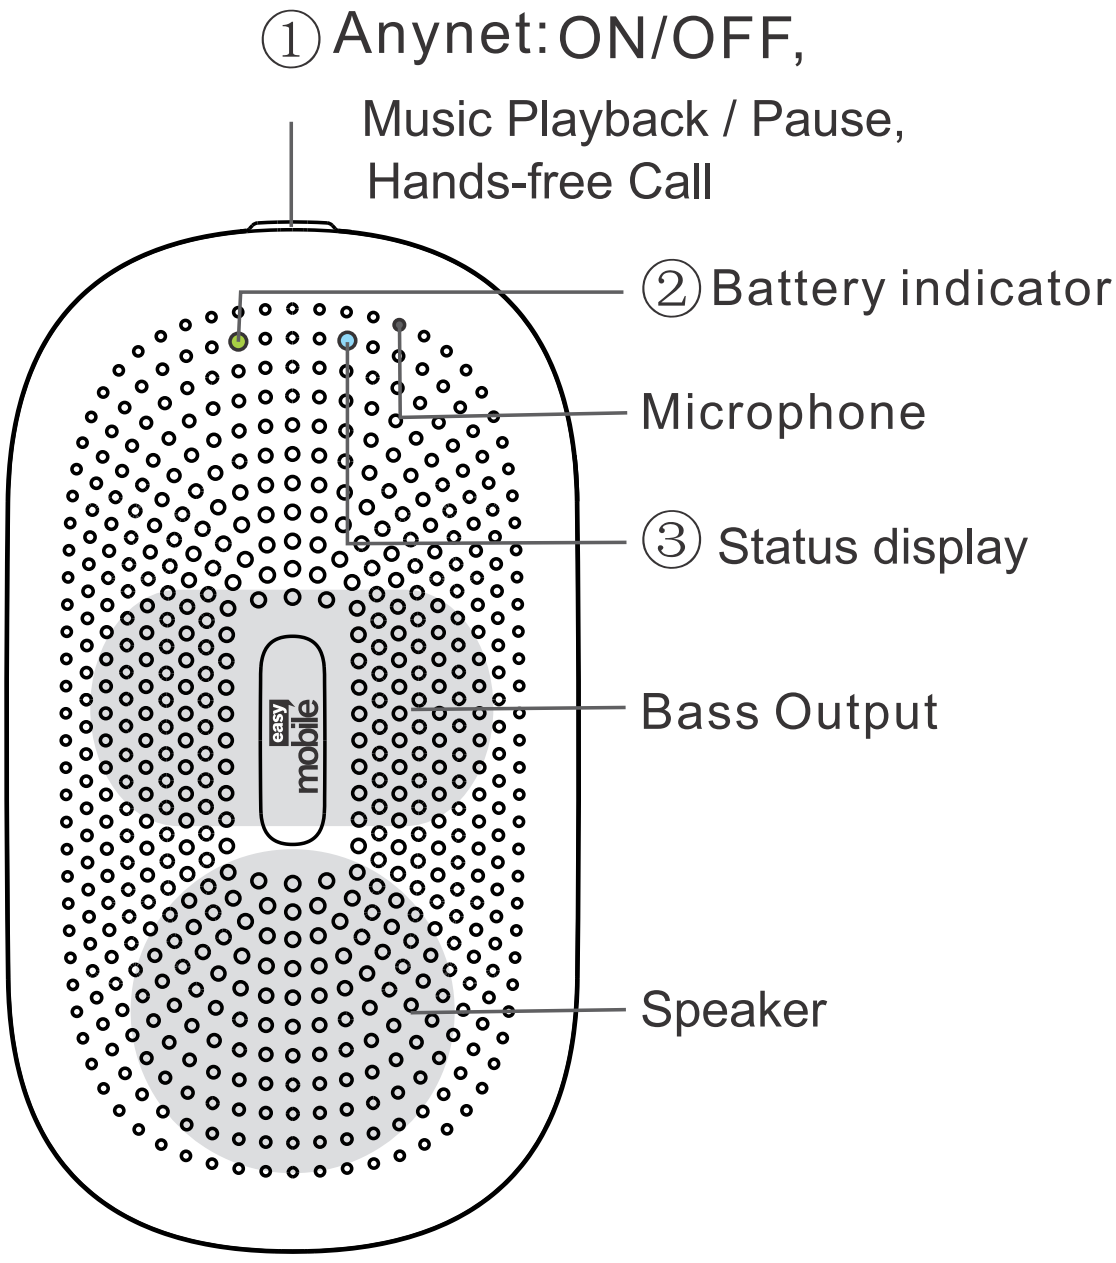
① Anynet: ON/OFF,
Music Playback / Pause,
Hands-free Call
② Battery indicator
Microphone
③ Status display
Bass Output
Speaker
easy
mobile

The LED indicator light

Battery LED indicator ②

Green 100-75%: - charging
Green Orange: 75-50% charge
Orange: 50-25% load
Blinking light -Lark: 25-0% load
(Showing the light when it restarts, click twice to show the charge of the
for 5 seconds when you are not responding in a call situation).

Status display ③

- Light Blue: not connected to the device.
- Blinking.
- Connected to the device - slow flashing.
- Light-Red: Charging / Low scintillation power.
- Full load / discharge - lighting.

Special Tips for the iPhone User:

1. When using iPhone adapter, please insert the dapter for your iPhone in first place.

2. Then insert the charging cable from the the Flex Box speaker (Micro USB) to the iPhone.

3. If you insert the charging line, no red means that you can not carry, please, pull the loading line to insert again, ensure connector can work.

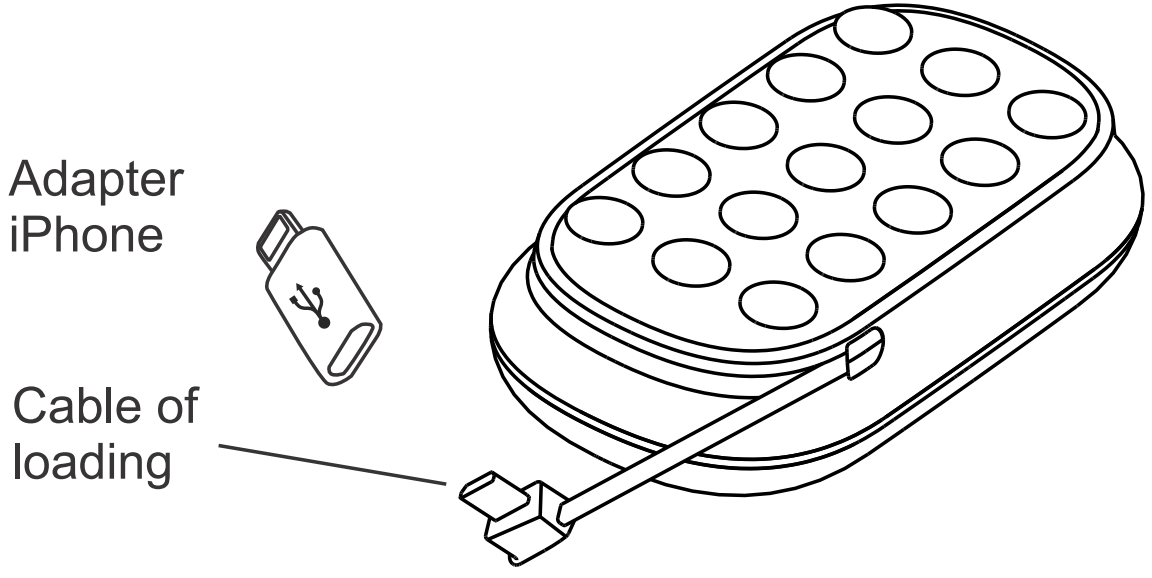

Hot Tips

1. To avoid damage to your hearing and prolong life the use of the speaker, please do not listen to music for a long time in a high volume environment.

2. When a fault occurs, please disconnect immediately the power switch, disconnect the USB cable, prevent the speaker and other components.

3. Excessive battery charging will affect the Bluetooth and the life of it, please load in due time.

---

easy mobile
GO EASY, GO MOBILE.

easym.com.br
/easymobile.br
@easy.mobile

Product Support:
Email: **support@easym.com.br**