easy mobile

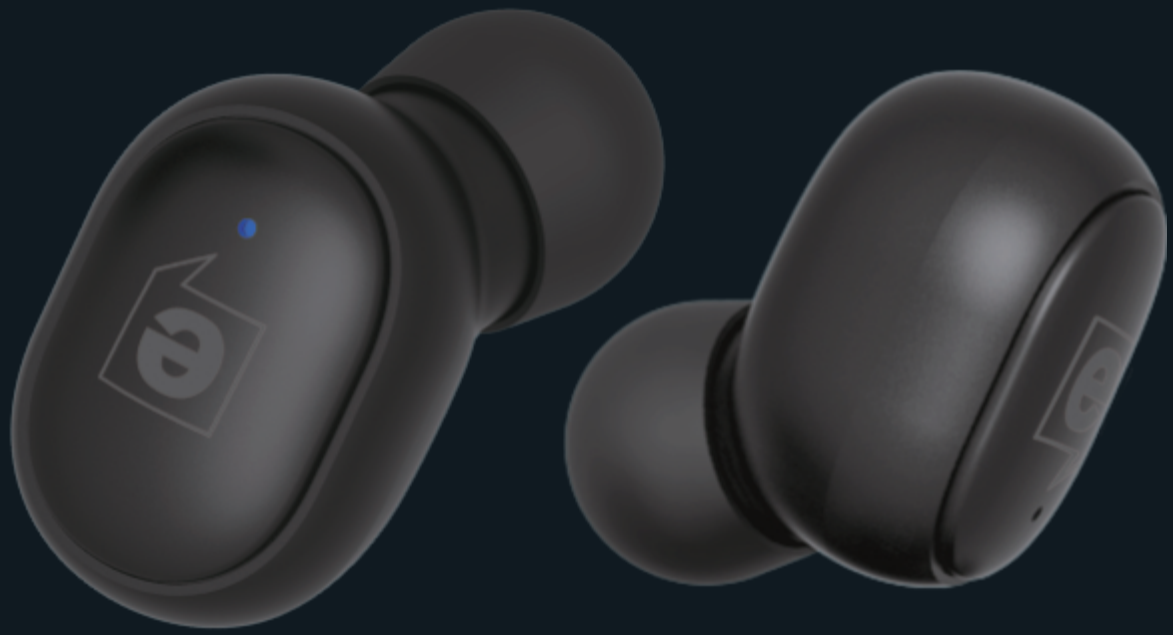

TRUE WIRELESS EARPHONE

INMOTION TWS

USER MANUAL

Inmotion TWS is the V5.0 Bluetooth True Wireless Stereo Earbuds supporting Auto Power On/Off Technology, Voice Assistant, Voice Prompt, and other features specified in this QRG.

OVERVIEW

(1) LED Light
(2) MF Button (Multifunction Button)
- On/Off
- Play/Pause Music
- Answer/End/Reject the Call
- Next Song (Right Earbud)
- Previous Song (Left Earbud)
- Voice Assistant

(3) Microphone
(4) Charging Contact Points
(5) Speaker

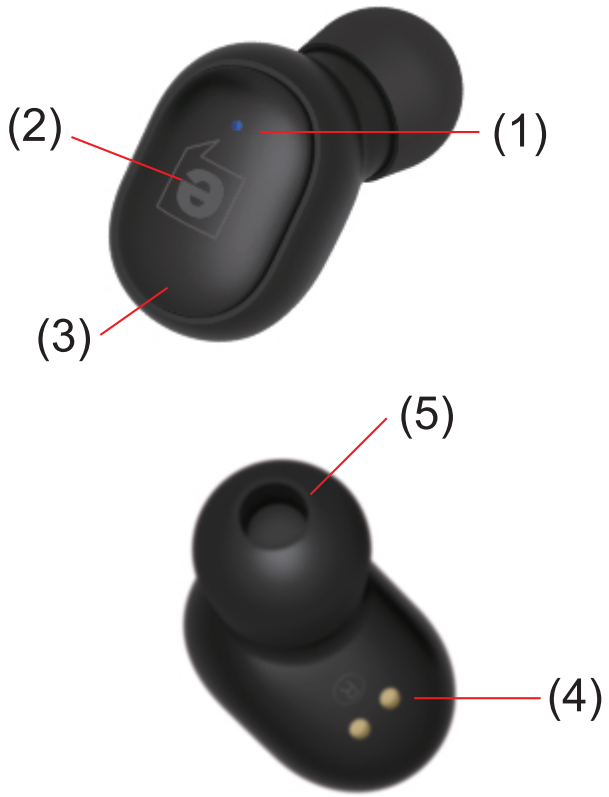

INTRODUCTION

Thank you for purchasing **Inmotion TWS** True Wireless Stereo Earbuds.
This manual will help you understand the operation of your Bluetooth headphones. You should also familiarize yourself with the Bluetooth function of your mobile phone or other devices before using the **Inmotion TWS** Bluetooth Earbuds.

CHARGING THE BATTERY

Inmotion TWS have charging contact points on the earbuds bodies and the Charging Case for storage and charging.

1. Place the **Inmotion TWS** into the charging slots of the Charging Case individually, the earbuds will be charged automatically.
2.During charging, the LED lights of both earbuds will be in red, while the LCD display on the charging case shows the current battery capacity.
3.When the earbuds are fully charged, the LED lights of earbuds will be turned off within 1 minute.

(1) LCD Display Shows Current battery Capacity of Charging Case.
(2) Earbuds Charging Slots
(3) Input for Charging the Charging Case (behind)

WHEN THE BATTERY IS LOW

When you hear the voice prompt "Low Battery". At this point please charge the **Inmotion TWS**. You can also refer to the Battery Meter on iPhone and other iOS devices.

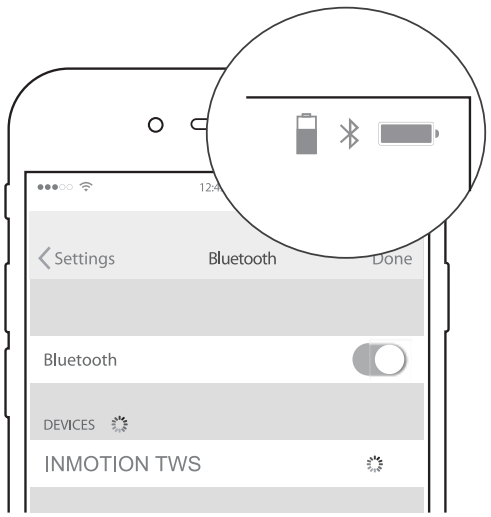

Remarks:
The Battery Meter only shows the remaining battery capacity of the Left Earbud. So if the Right earbud is running out of power, it won't be reflected on the Battery Meter.

IMPORTANT

- Charge **Inmotion TWS** before your first use.
- You should recharge **Inmotion TWS** if it ha not been used for more than 12 months.

CHARGING THE CHARGING CASE

Charging Case has a built-in 210mAh battery. It provides approximately 2 additional charges for 2 earbuds. After using the charging case to charge the earbuds twice, please remember to charge the charging case before it is running out of power.

1. Plug one end of the USB charging cable into the charging port of the Charging Case, and put the other end into your computer or AC charger with USB port.
2. During charging, the LCD display on the charging case shows the current battery capacity. When the charging case is fully charged, the LCD display on the charging case shows ‘100'
3. It takes only 2 hours to fully charge the charging case.

MULTIFUNCTION BUTTON

Answer/And/Reject/Calls; Redial; Next Song (Right); Previous Song (Left); Play/Pause Music; Voice Assistant.

TURNING INMOTION TWS ON/OFF

To turn Inmotion TWS on:

Take out the earbuds from the Charging Case or long press MF Button for 3 seconds. The blue LED light flashes with a voice prompt in 2 seconds. The earbuds are now turned on.

To turn Inmotion TWS off:

Put the earbuds into the Charging Case or long press MF button for 5 seconds. The red LED light flashes with a voice prompt. The headphones are now turned off.

NOTE:

When the 2 earbuds enter in-sync mode, putting the left earbud into the charging case will turn the right earbud into pairing mode if it hasn’t been connected to your phone before. If you place the Right Earbud into the Charging Case, the Left Earbud will stay connected to the mobile phone.

USE INMOTION TWS AS A PAIR

STEP 1. In-sync wireless stereo connection with mobile phone.

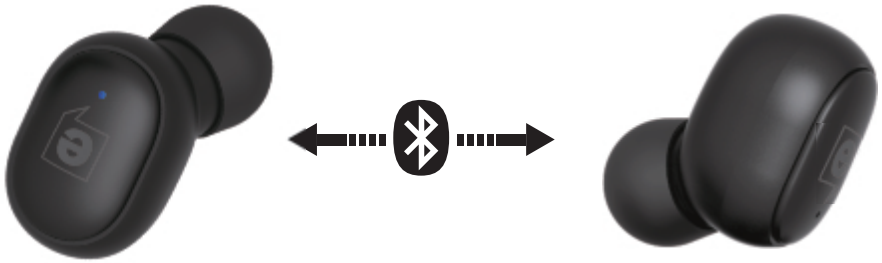

1) Take out the earbuds from the Charging Case or long press MF Button for 3 seconds. The blue LED light flashes with a voice prompt in 2 seconds, now both earbuds are switched on and will connect automatically after 3 seconds.
2) The main earbud will flash in red and blue, and turn into pairing mode for a mobile phone.

STEP 2. Connecting with Mobile Phone or Other Bluetooth Devices.

1) Turn on the Bluetooth function of your mobile phone or other Bluetooth devices, start searching for the Bluetooth devices on your mobile phone. Select **Inmotion TWS** to complete the connection.

2) If your phone asks for passkey or PIN-code, confirm with '0000'(4-zeros).

NOTE:

1. If you place any one of these two earbuds into the Charging Case, the one outside will stay connected your mobile phone.
2. If no pairing is active for a period of time (approximately 5 minutes), the earbuds will turn off automatically.

USE INMOTION TWS INDIVIDUALLY

You may need to repeat the pair and connect **Inmotion TWS** procedure with your mobile phone or other Bluetooth devices if you want to use each earbud individually.

1) Take out the earbuds from the Charging Case or long press MF Button for 3 seconds to turn on '**Inmotion TWS**', the earbud enters into pairing mode automatically along with the LED flashes in red and blue, then the LED light will flash in blue after pairing.
2) Turn on the Bluetooth function of your mobile phone or other Bluetooth devices, start searching for the Bluetooth devices on your mobile phone. Select '**Inmotion TWS**' and follow the instruction. If your phone asks for passkey or PIN-code, confirm with '0000'(4-zeros).
3) When **Inmotion TWS** and your mobile phone are paired and connected, you will hear the voice prompt.

NOTE:

If no pairing is possible for a period of time (approximately 5 minutes), the earbud will be turned off automatically.

ANSWERING / ENDING / REJECTING CALLS

When the earbuds are turned on, and there is an incoming call, you will hear a musical tone.

-Press MF button to answer the call.

-Press MF button to end the call.

-Long press MF button for 2 seconds to reject the call.

PLAYING / PAUSING MUSIC

Playing Music: Short press the MF button.
Pausing Music: Short press the MF button.
Next Song: Long press the MF button on the Right Earbud to play the next song when playing music.
Previous Song: Long press the MF button on the Left Earbud to play the previous song when playing music.

VOICE ASSISTANT

Triple click the MF button for around 2 seconds to activate Siri or Google Assistant.

NOTE: 1.The Voice Assistant cannot be activated when making calls or listening to music.
2.You may encounter the problem to wake up Google Assistant from lock screen or when the screen is off. If so, please unlock the screen and try again.

WITH A PC OR TABLET

You can connect **Inmotion TWS** with a Bluetooth-enabled PC or Tablet that supports headphones or hands free profiles. Please refer to the user manual of your Bluetooth-enabled PC or Tablet for setup information.

BARNDS

Other brands and product names mentioned on the packing box and the user manual are trademarks of their respective owners.

WARNING

Permanent hearing loss may result from long-term exposure to sound at high volumes. Use as low a volume as possible and avoid prolonged use of the earphone at excessive levels. Please read the safety guidelines below prior to using this earphone.

Prior to using this product follow these steps.

1. Before putting on the earphone, turn the volume control to its lowest level.
2. Put the earphone on, and then slowly adjust the volume control to a comfortable level.

During the use of this product.

1. Keep the volume at the lowest level as possible.
2. If increased volume is necessary, adjust the volume control slowly.
3. If you experience discomfort or ringing in your ears, immediately discontinue using the earphone. With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

SAFETY INFORMATION

1. If you have a cardiac pacemaker or other electronic medical equipment, you should consult your physician before using this product.
2. This product contains small parts that may be hazardous to children. Keep out of the reach of children. The bags themselves or the many small parts they contain may cause choking if ingested.
3. Never attempt to disassemble the product yourself, or push other objects into this product, as this may cause a short circuit, which could lead to fire or electrical shock.
4. None of the components can be replaced or repaired by users. Only an authorized dealer or service center may open the product.
5. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact your dealer.
6. If the product overheats, has been dropped or damaged or has been submerged in a liquid, discontinue use.

SPECIFICATIONS:

Bluetooth 5.0 profiles, Case up to 8h, Music up to 3h, Talk up to 4h, Charge 2h.

Package content:

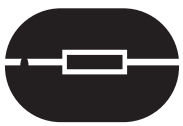

Warranty term

Warranty: 1 YEAR

Easy Mobile products strictly follow all the rules and regulations in force in the country, so you can safely enjoy all the benefits that the device can provide.

Loss of Warranty:

- Product infringement by unauthorized persons or technicians.
- Damage caused by misuse such as: chemical wear; exposure to extreme temperatures; ruptures; cracks and deformation from falls.
- Damage to loading doors caused by uncertified cables. Easy Mobile cables are recommended.
- Damage caused by uneven voltage, out of specification of the device.

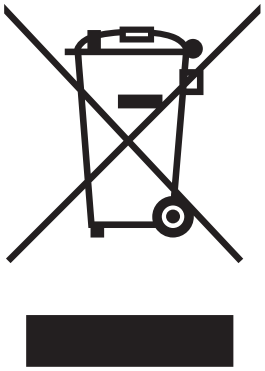

Old electrical appliances should not be disposed of with household waste, but should be disposed of separately. Dispose of at a collection point for this type of waste. The owner of old appliances is responsible for taking the appliances to these collection or recycling points. By doing this you contribute to preserving the environment and recycling valuable raw materials and treating toxic substances.

MADE IN CHINA

CE RoHS compliant

easy mobile
GO EASY, GO MOBILE.

easym.com.br
/easymobile.br
@easy.mobile

Product Support

Email: **support@easym.com.br**