easy mobile

GO EASY, GO MOBILE.

WISE BOX

WIRELESS PORTABLE SPEAKER

USER MANUAL

Attention

Read the instructions carefully before
of this appliance.

1. GENERAL PRODUCT INFORMATION

1.1 MAIN CHARACTERISTICS

- BK Bluetooth 2.1
- Compatibility: Works with Bluetooth such as mobile phones, smartphones, tablets, music devices, Bluetooth 2.1 or higher
- Built-in rechargeable Li-ion battery, full charge for up to 4 hours of operation
- Voice Response for easier operation in Bluetooth mode
- Telephone function - Handsfree
- TF card reader (Micro SD)
- Connectivity:
  3.5mm Auxiliary Audio Connection
  Bluetooth: A2DP, AVRCP, HFP Bluetooth
  Range: 10m

1.2 CONTENTS OF THE PACKAGE

Refer to the following accessories.

Bluetooth sound box	1pc
Instruction Manual	1pc
Micro-USB Cable	1pc
Audio Cable 3.5mm	1pc

2. ELECTRICAL SPECIFICATION

2.1 AUDIO PERFORMANCE

- Driver: 1 pcs 2 "speaker and 1 pc serious
- RMS Output: 5W
  System SNR:> 65 dB @ 1W
  TH D: <10% at maximum volume
  Loudness: SPL> 65dB
  Frequency response: 90Hz - 20kHz

2.2 ENERGY SOLUTION

• Built-in 3.7V 900mAh internal lithium battery can last up to 4 hours of operation

• 5V / 500mA, to give a full charge on the battery charge for 4hrs 2.3

OPERATING INSTRUCTIONS

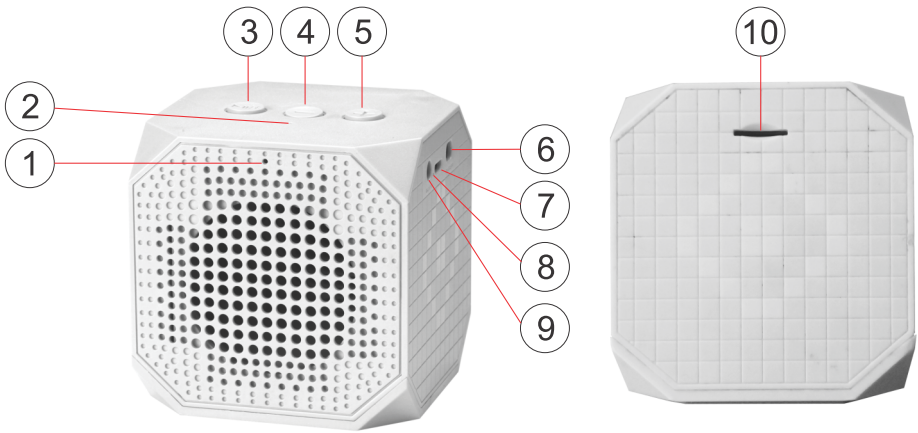

1.Indicator LED

2. Microphone

3. Press to Play / Pause, press and hold for 3 seconds to connect to another device

4. Press to next song, press and hold for 3 seconds to increase volume

5. Press for the previous song, press and hold for 3 seconds to decrease the volume.

6. Power switch

7. Micro-USB port for charging

8. LED indicator for charging

9. Auxiliary Input 3.5mm

10. TF card slot (Micro SD)

2.4 INDICATION OF LED LIGHT

1. When charging - red LED; full charge - LED off

2. LED mode
• Bluetooth mode: Connecting - Blue LED flashing rapidly; connected and turned on - blue LED flashing slowly
• Auxiliary Audio Mode - Red LED

2.5 VOICE ANSWER (for Bluetooth mode only)

1. On - "welcome" - which translated is "welcome»
2. Connecting - "waiting to connect to bluetooth device" - which translated is "waiting for Bluetooth device connection»
3. Connected and connected - "connected to bluetooth device" - which translated is "connected to the Bluetooth device»

3. BASIC OPERATION

3.1 FUNCTION

Turning on and off
• On: Turn the key to the ON position, the LED indicator flashes rapidly in blue, and the connected unit automatically enters the Bluetooth search mode.
• Off: Turn the key to the OFF position, the LED indicator goes off - the unit is off.

Volume Adjustment
Press and hold the (+) or (-) buttons to increase or decrease the volume.

Audio Playback
After the Bluetooth connection is successful, start the audio program on the connected device. Select the song you want to hear, the unit will play the song now. Press (m) once to pause the song, press (m) again to resume song playback. Press the (+) or (-) buttons to select the previous or next song.

3.1.1 BLUETOOTH

Press and hold the power button to turn on, the speakerphone will enter the Bluetooth mode automatically. Activate the Bluetooth function on your cell phone or other Bluetooth devices and will start searching for the Bluetooth connection. The Bluetooth connection name of this unit is "WiseBox". By identifying and choosing this unit, your phone or other Bluetooth device will connect to the sound box. If you want to disconnect from the device or want to connect to another device, press and hold the (⏯) button to disconnect or to get a new connection.

3.1.2 PHONE FUNCTION - HANDS FREE

After the phone is connected to the Bluetooth speaker, the device plays the ringing tone when you receive a call. Press the （ ⏯ ） button to answer the call and pause music playback. The hidden microphone will serve as the phone's microphone. Press the (⏯) button to turn off the call and resume music playback. Press and hold the (⏯) button to reject calls.

3.1.3 AUXILIARY AUDIO INPUT

This unit can be connected to the auxiliary audio source for music playback. Plug one end of the 3.5mm audio cable into the auxiliary audio input of the unit, plug the other end of the cable into the MP3 player or compatible device. Turn on the MP3 Player or other device to operate then adjust the desired volume. The music playback function via Bluetooth will be disabled when the auxiliary audio input is in operation.

3.1.4 MEMORY CARD TF (Micro SD)

Insert the TF memory card into the memory card slot, and the unit automatically accesses and plays the recorded music. Press the (M) button to pause and press the () button again to return to the song. Press-
buttons (+) or (-) to access the next or previous song.

The instructions are for reference only, the company reserves the right to modify the specifications contained in this document without prior notice.

4. TROUBLESHOOTING

- The unit does not respond:
  The rechargeable battery is low.
  The unit is off.

- The unit is muted:
  The Bluetooth connection was not successful.
  You have exceeded the distance of Bluetooth devices.
  Volume at the minimum level.

- The unit is faulty:
  The battery is low, recharge the battery.
  Reboot the drive.

- Music from the TF memory card does not play:
  The memory card is not compatible.
  The unit does not support a memory card larger than 32gb.

easy mobile
GO EASY, GO MOBILE.

easym.com.br
/easymobile.br
@easy.mobile

Product Support:
Email: **support@easym.com.br**