easy mobile

GO EASY, GO MOBILE.

WIRELESS EARPHONE
JAZZY BASS BT

USER MANUAL

TROUBLESHOOTING

No power.	Recharge your earbuds using the included micro USB cable. Try using a different micro USB cable.
Music is not playing over Bluetooth.	Make sure your Bluetooth device has an A2DP profile. Check that the two devices are paired and connected with Bluetooth, restart the earbuds ear to reconnect your Buetooth device.
Bluetooth device will not reconnect with the earbuds	Navigate to the Bluetooth settings menu on your Bluetooth device, tap ‘Jazzy Bass BT’ select and select 'Forget'. Now follow the steps to pair your device again.

Specifications:
Frequency Response: 20Hz to 20KHz
Driver Size: 10mm
Impedance: 32 oHm

Battery information:
Built-in Battery: Lithium
Music playback time: * 3 hours
Charging time: 1 to 2 hours

Bluetooth information:
Profile: 5.0

Operating distance: 10 meters
Additional Connection Sources:
Power Source: Built-in Rechargeable Battery or via USB cable

* The approximate playing time depends on individual use and can be greater or less than the specified time.

CHARGING YOUR JAZZY BASS BT

- Plug the micro USB cable into the micro USB port on the side of the in-line remote, and connect the other end of the cable to either a computer USB port or to a USB-compatible car or wall charger.
- When charging, the LED indicator will glow red.
- When charging is complete, the LED light will turn a solid blue. Charging time is approximately 1-2 hours.

PAIR & CONNECT WITH A NEW DEVICE

- With the Earbuds powered off, press & hold the power button on the earbuds for 3-5 seconds to turn on the earbuds and enter into Bluetooth pairing mode. The LED light will flash blue and red and the earbuds will emit a tone.
- On your Bluetooth-enabled smartphone, tablet or media player, navigate to the Bluetooth settings menu, turn on the Bluetooth feature, and search for new devices.
- After a few seconds you will see “Jazzy Bass BT” listed.
- Tap this model to select it. The LED will begin to slowly blink blue, and the earbuds will emit a tone to indicate that it has been successfully paired with your device.

NOTE: If your device asks for a password to connect to the earbuds, enter “0000”
NOTE: You only need to pair your Bluetooth device with the Earbuds once.

POWER ON & OFF / RECONNECTING TO BLUETOOTH

- With your previously paired device's Bluetooth turned on and in range, press & hold the power button on the Earbuds for 3-5 seconds.
- The earbuds will power on, a blue LED light will flash, and will automatically reconnect to the last Bluetooth device they were connected to.
- To turn the Earbuds off, press & hold the power button again for about 3-5 seconds. The LED light will flash red, and the earbuds will emit a tone to indicate that the earbuds are now powering off.
- If you have a previously paired device that does not auto-reconnect, navigate to the Bluetooth settings menu on your device, turn on the Bluetooth feature, and select "Jazzy Bass BT" from your list of paired Bluetooth devices.

PLAY

- Connect your device to the Earbuds via Bluetooth (see "Pair & Connect with a New Device").
- Open your favorite music app and press play.
- Control the music, track & volume from your device, or control them from the in-line controls on the Earbuds. Press the "PLAY" button once to play/pause music & answer calls.
- Press the "+" or "-" button once raise/lower the volume on the earbuds. Press and hold to skip to the next/previous track.
  NOTE: Volume on your device and on the earbuds are controlled separately.
- All audio, including music, games, videos, and notifications will be routed through the Earbuds.

WARRANTY TERM

Easy Mobile products strictly follow all norms and rules in force in the country's legislation for you safely enjoy all the benefits that the device can provide you.

LOSS OF WARRANTY

- Violation of the product by unauthorized persons or technicians.
- Damage caused by misuse such as: wear and tear by chemicals; exposure to extreme temperatures; breaks; cracks and deformation from falls.
- Damage to the loading ports caused by non-certified cables. Easy Mobile cables are recommended.
- Damage caused by irregular voltage, outside the specification of the device.

Old electrical appliances should not be disposed of with household waste, but should be disposed of separately. Dispose of at a collection point for this type of waste. The owner of old appliances is responsible for taking the appliances to these collection or recycling points. By doing this you contribute to preserving the environment and recycling valuable raw materials and treating toxic substances.

OVERVIEW

Button “+”
Press to increase Volume.

Long press and to skip to
the next track.

Play Button:
Press to play/pause music
or answer calls.

Long Press for 3 to 5 seconds
to turn On/Off.

Double press to activate the Siri®
on iPhone® and the Google Assistant™
on Android™

Button “—”
Press to decrease Volume

Long press to skip to
the previous track

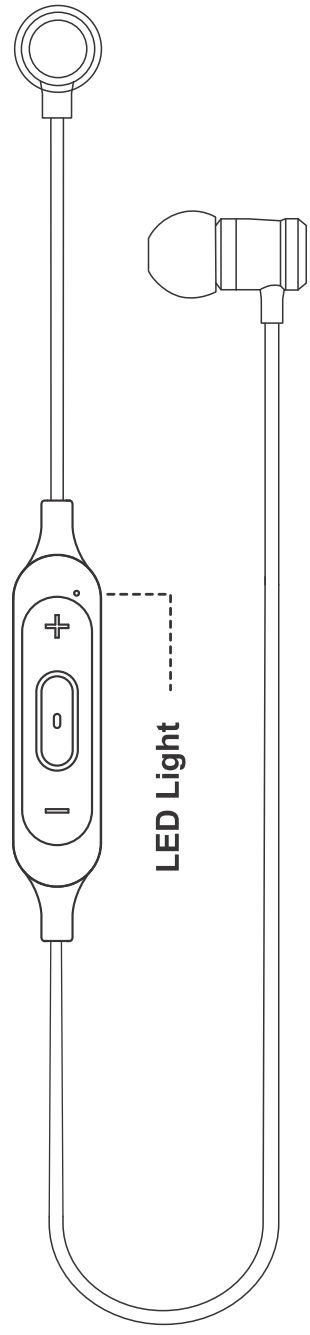

Double-click the PLAY button at any time
to access your smartphone's voice assistant.

Package content:

FCC Notice:
This device complies with part 15 of the FCC rules. The operation is subject to the following two conditions:
1. This device may not cause harmful interference. 2. This device must accept any interference received, including interference that may cause undesired operation.

MADE IN CHINA

CE RoHS compliant

ANATEL
Mod.: Jazzy Bass
00816-21-11673

easy mobile
GO EASY, GO MOBILE.

easym.com.br
/easymobile.br
@easy.mobile

Product Support: **support@easym.com.br**